




DEFENDER SERIES SCALES

Assembly Instructions

(Refer to Documentation CD
for operating instructions)



1

Remove Scale and Accessories from carton.

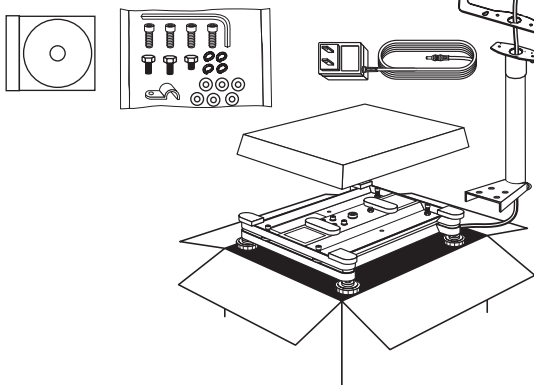

4

 

Attach Indicator to Bracket.
Attach Bracket to Column.

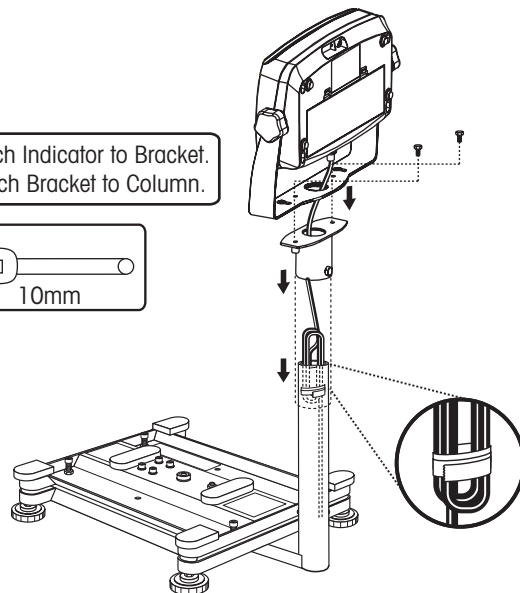

2





 Remove Shipping
Spacers.

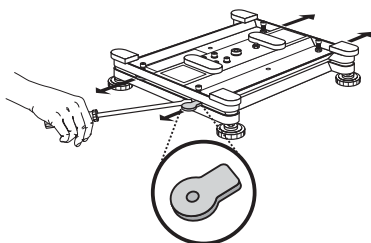



5

 Install Platform.
Adjust 4 levelling feet.

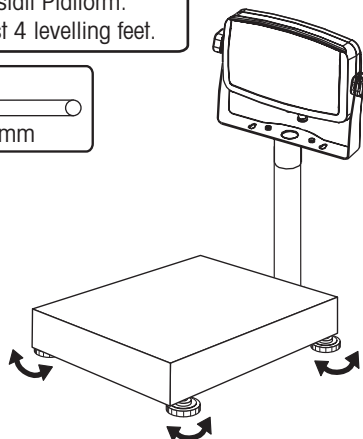


3

Attach Column and
secure Load Cell Cable.

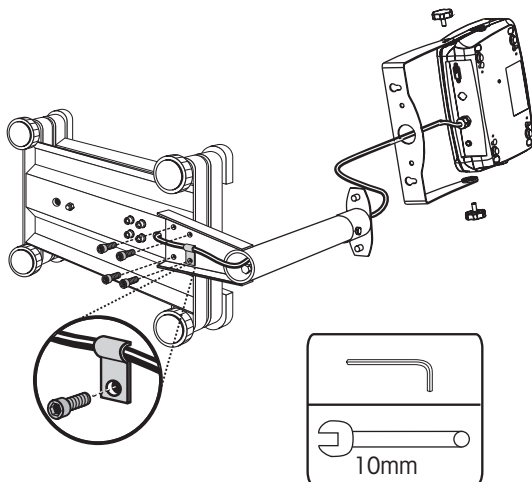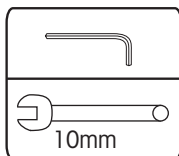

6

Connect Power Cord to Indicator.
Plug Power Supply to Wall Outlet.

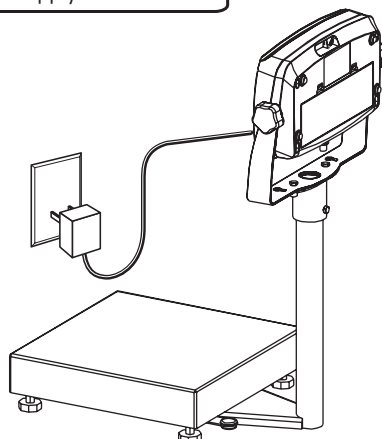



OVERVIEW OF CONTROLS AND FUNCTIONS

Button	 Yes	 No	 Back	 Exit
Primary Function (Short Press)	ON/ZERO Turns the Indicator on. If Indicator is On, sets zero.	PRINT Sends the current value to the COM port if AUTOPRINT is set to Off.	FUNCTION Initiates an application mode.	TARE Performs a tare operation.
Secondary Function (Long Press)	Off Turns the Indicator off.	Units Changes the weighing Unit.	Mode Allows changing the application mode. Press and hold allows scrolling through modes.	Menu Enter the User menu.
Menu Function (Short Press)	Yes Accepts the current setting on the display.	No Advances to the next menu or menu item. Rejects the current setting on the display and advances to the next available setting. Increments the value.	Back Moves Back to previous menu item. Decrements the value.	Exit Exits the User menu. Aborts the calibration in progress.

NOTE: REFER TO DEFENDER SERIES CD DISK FOR COMPLETE INSTRUCTIONS



* 8 0 2 5 1 0 5 7 *
P/N 80251057 © Ohaus Corporation 2006, all rights reserved.

Printed in China