


Upload files to Fieldbus module

Use an FTP client, like Filezilla.

1. Unzip WebPages_x.y.zip file in a local folder. Subfolder NIC52_PUB will be created.
2. Click on File/Site manager...
3. Click on New site.
4. Insert data

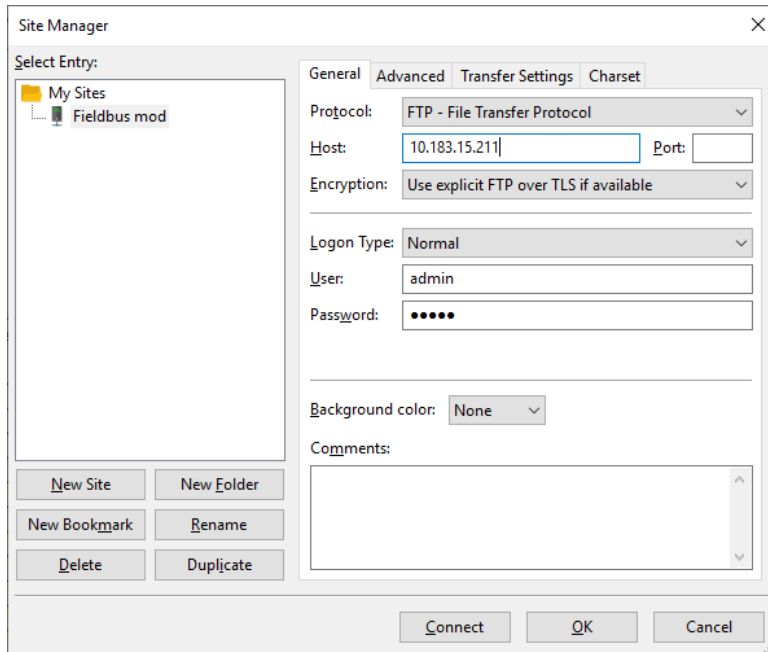

Default User and password are both equal to admin.

(if password admin is wrong use universal password "41042")

5. On the left side navigate on the local site to the files to transfer, the ones in NIC52_PUB folder
6. On the right side, remote site, navigate to SYSVOLUME/PORT_1/SX/PUB and delete all files
7. Select all the files on the local site and copy them to the remote site.
8. Restart the Fieldbus module and connect to it with a browser.